
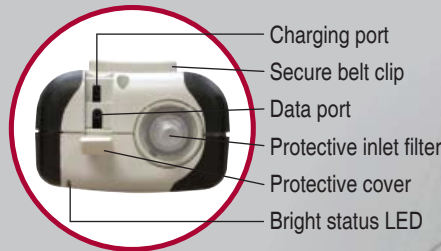


Leland Legacy Sample Pump

High Flows, Long Runs Enhance Measurement Sensitivity!

Flows: 5 to 15 L/min

Certifications	
CE	 ETV <i>performance verified</i>



Top view



Leland Legacy® is the perfect partner for the Sioutas Impactor

⊙ **High flows — 5 to 15 L/min**

- Provides the high flows and long run times of a vacuum-style pump in a compact, portable, battery-operated sampler within specified back pressure range

⊙ **Designed for use with impactors, spore traps, 37-mm filters, low-volume PUF tubes, and other low-pressure applications†**

⊙ **Long 24-hour runs on one charge with Li-Ion battery**

- Suitable for unattended ambient air sampling

⊙ **Low noise, size, and weight**

- Ideal for indoor air studies or unattended ambient air sampling

⊙ **Longer runs + Higher flows = Enhanced sensitivity for measuring low concentrations**

⊙ **Highly accurate isothermal flow control system**

⊙ **Flexible programming options**

- Manual three-button programmability using the large built-in keypad
- PC programmability with DataTrac Software for Leland Legacy
 - Create complete running sequences, download sampling history, and generate exposure reports for ISO 9000 or quality programs

⊙ **Large easy-to-read LCD**

- Displays battery status indicator, flow fault, run time data, and sampling parameters

⊙ **CalChek automatic calibration feature**

- Provides hands-free direct communication to a Defender calibrator

⊙ **Adjustable datalogging interval from 3 seconds to 8 hours with DataTrac Software**

⊙ **Rugged and convenient case design**

- Tough rubber overmolding protects the pump and provides a sure grip
- Anti-static thermoplastic material
- Inlet port with removable protective cover
- Easy-access computer interface and battery charging jack under protective cover

⊙ **Performance with Sioutas Impactor verified by EPA-ETV**

⊙ **Featured in deployable sampler systems**

⊙ **CE marked**

† Leland Legacy is not recommended for high back pressure applications such as asbestos clearance sampling.



Leland Legacy Sample Pump

Performance Profile	
Flow Rate Accuracy	± 5% of set-point after calibration
Timing Accuracy	1 min/mo at 25 C
Atmospheric Pressure Accuracy	± 3% in Hg
Typical Run Time	Battery: 24 hrs at 9 L/min with Sioutas Impactor (approx. 13 in water back pressure) 24 hrs at 5 L/min with low-volume PUF tube 24 hrs at 10 L/min with IMPACT Sampler in DPS System 24 hrs at 8 L/min with 8 L/min Respirable PPI Using charger with AC power: Extended run times
Charge Time <i>(varies with battery capacity and level of discharge)</i>	15 hrs with approved charger
Temperature Range	Operating: 32 to 104 F (0 to 40 C) Storage: -4 to 95 F (-20 to 35 C) Charging: 32 to 113 F (0 to 45 C)
Altitude	The pump can apply correction to volumetric flow during sampling for weather-related or altitude variations from the atmospheric pressure established at calibration up to at least 7500 feet (2286 meters) above and 5000 feet (1524 meters) below sea level.
Timer Display Range	1 to 99999 min (69 days); if run time exceeds 69 days, timer display rolls over
Time Display	Time of day in hours and minutes (12 or 24-hr clock) with AM and PM indicators
Volume Display	Continually updated based on corrected flow rate multiplied by sampling time When volume exceeds 99,999 liters, the pump will continue to run normally but an O_FLO Error will appear on the LCD.
Noise Level	62.5 dBA [‡] - pump without case 52 dBA [‡] - pump housed in noise-reducing case (optional accessory)
Flow Fault	After 15 sec, pump goes into Hold, retains accumulated run time and historical data, and displays fault icon. Auto-restart is attempted every 20 sec up to 10 times (adjustable with DataTrac Software)
Flow Control	An internal isothermal flow sensor measures flow directly and continuously. Sensor readings are used in a flow monitoring algorithm to maintain calibrated volumetric flow. In addition, built-in atmospheric temperature and pressure sensors provide readings to correct volumetric flow for these parameters when they vary from point of calibration.
Weight	36 oz (1 kg)

[‡] Measured 3 feet (1 meter) from pump operating at 10 L/min and 12 inches water back pressure

Ordering Information

Leland Legacy requires 3/8-inch ID tubing.

Pump and Kits	Cat. No.
Leland Legacy Pump** with Li-Ion battery pack and screwdriver set, <i>requires charger</i>	100-3002
Starter Kit includes pump, single charger, Tygon tubing (3 feet, 3/8-inch ID), and collar clip with cable tie	100-240 V 100-3002-S
Single Pump Kit*** includes Leland Legacy pump and single charger, in a Pelican carry case	100-240 V 100-3002K
5-pack Pump Kit*** includes 5 Leland Legacy pumps, Take Charge 5 Multi-charger, and DataTrac Software, in a deluxe Pelican case	100-240 V 100-3002K5
Accessories	
TSI 4146 Calibration Kit, flow measurement from 0.01 to 20 L/min, includes calibrator, soft-side case, mounting lugs, 1/4-inch ID tubing, battery pack, 6 AA batteries, inlet filter, dampening module, NIST certificate, and manual	740-4146
Chargers	
Single	100-240 V 223-241
Take Charge 5 Multi-charger	100-240 V 223-441
CalChek Communication Cable, <i>required for CalChek calibration</i>	210-502
Tubing Adapter, adapts 3/8-inch ID tubing to 1/4-inch ID tubing	P31211
Replacement Parts	
Replacement Battery Pack,** Li-Ion <i>Replacing batteries with non-approved battery packs voids any warranty.</i>	P75692
Replacement Filter/O-ring Set, 5 filters and 1 O-ring	P40021B
Replacement Inlet Filters, pk/50	P40021A

** Leland Legacy pumps contain Li-Ion batteries and are subject to special shipping regulations.

SKC Limited Warranty and Return Policy

SKC products are subject to the SKC Limited Warranty and Return Policy, which provides SKC's sole liability and the buyer's exclusive remedy. To view the complete SKC Limited Warranty and Return Policy, go to <http://www.skcinc.com/warranty>.

Flow Rate (ml/min)	5 to 15 (L/min)
Weight in Ounces (grams)	36 (1000)
Compensation Range (inches water)	Up to 12 at 10 L
Built-in Timer/Clock	Clock
Constant Flow	Yes
Programmable	Yes
PC-compatible	Yes
Multi-tube Sampling	N/A
Flow Fault Feature	Yes
RF/EMI Shielded	Yes
Intrinsic Safety	N/A
MSHA-approved Models Available	N/A
ATEX Models Available	N/A
CE Marked	Yes
Corrects for Changes in Atmospheric Pressure	Yes
Corrects for Changes in Temperature	Yes
Battery Type	Li-Ion (7.4 V, 12 Ah, 88.8 Wh)
Battery Check	Yes
Tubing	Requires 3/8-inch ID tubing

Recommended Accessories	
Chargers	
Battery Charging Adapter	Cat. No. 223-248
CalChek Communication Cable	Cat. No. 210-502
Noise-reducing Case	
TSI 4146 Calibration Kit	Cat. No. 740-4146
DataTrac Software for Leland Legacy	Cat. No. 877-92
Low-volume PUF Tube Holder	Cat. No. 224-29P
Tubing Adapter	Cat. No. P31211
Filter Holders	
Tubing	